
anex air-z


MAINTENANCE MANUAL

Folding the stroller	4
Unfolding the stroller	5
Assembly and disassembly of the front wheels	6
Locking front swivel wheels	6
Brake	6
Shock absorption	7
Adjusting the stroller's backrest	7
Ventilation	
Stroller hood	9
Legrest adjustment	9
Stroller's security barrier	10
Safety belts	10
Basket	11
Reversing seat softgoods	12
Reversed seat hood	15
Cleaning	16
Additional pillow	18


Folding the stroller

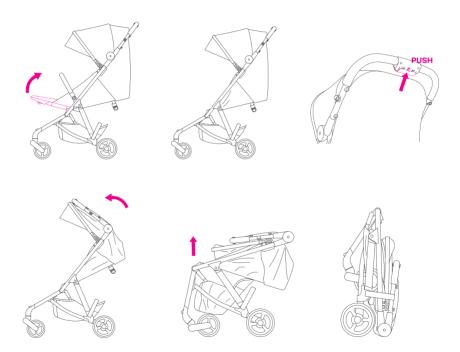


Unfolding the stroller

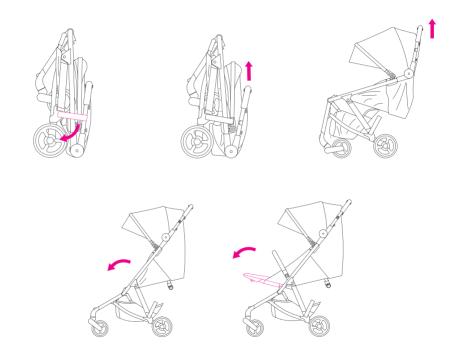

  
Assembly and disassembly of the front wheels





Locking front swivel wheels

 Brake






Shock absorption



Adjusting the stroller's backrest





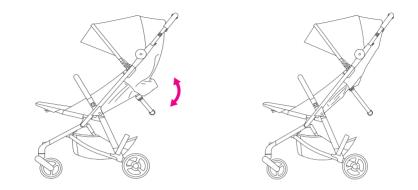


Ventilation







Stroller hood

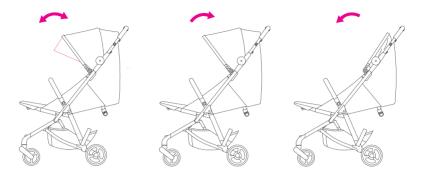


Legrest adjustment

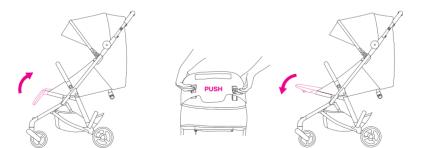



Stroller's security barrier

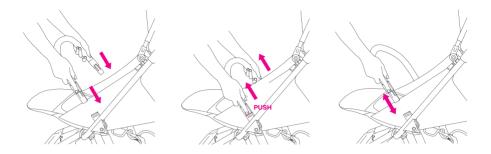


Safety belts

 

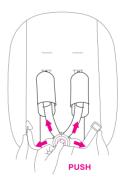

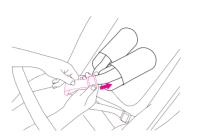

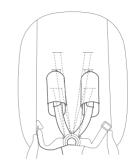


Basket








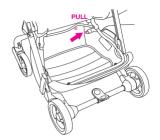



Reversing seat softgoods






 

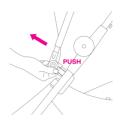


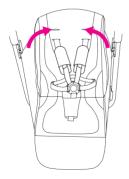

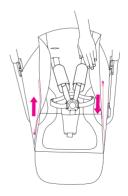






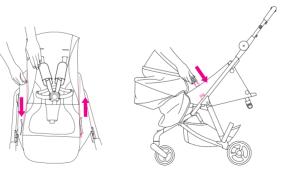

PULL

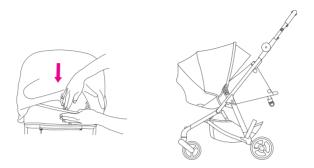


Reversed seat hood




  
Cleaning

 








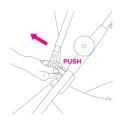





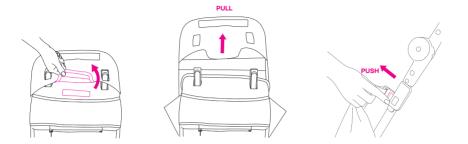

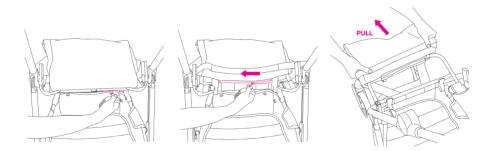

Additional pillow







EN 1888-2:2018+A1:2022



Check for the most recent manuals on our website: anexbaby.com

The information is subject to change without notice. Anex shall not be liable for technical errors or omissions contained in this manual. The purchased product may differ from the product as described in this manual. AVALEX PTE. LTD. 114 Lavender Street, #08-58/59 CT Hub 2, Singapore 338729

+65 6221 5096 office@anexbaby.com