
Never slow down


air-x²

MAINTENANCE MANUAL




Folding the stroller	4
Unfolding the stroller	5
Assembly and disassembly of front wheels	6
Front swivel lock	6
Brake	7
Shock absorption	7
Adjusting stroller backrest	8
Ventilation	9
Stroller hood	11
Safety buckle	12
Safety belts length adjustment	13
Safety belts height adjustment	15
Basket	15
Carry handle	17
Seat inner removal	17
Soft goods removal	19
	Unfolding the stroller Assembly and disassembly of front wheels Front swivel lock Brake Shock absorption Adjusting stroller backrest Ventilation Stroller hood Safety buckle Safety belts length adjustment Safety belts height adjustment Basket Carry handle Seat inner removal

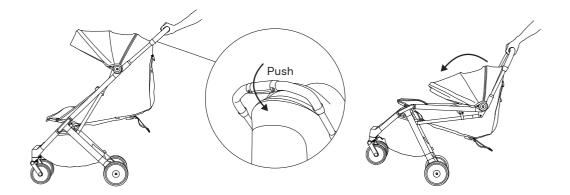

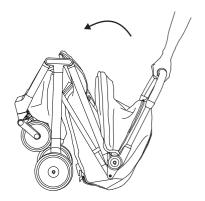




Unfolding the stroller

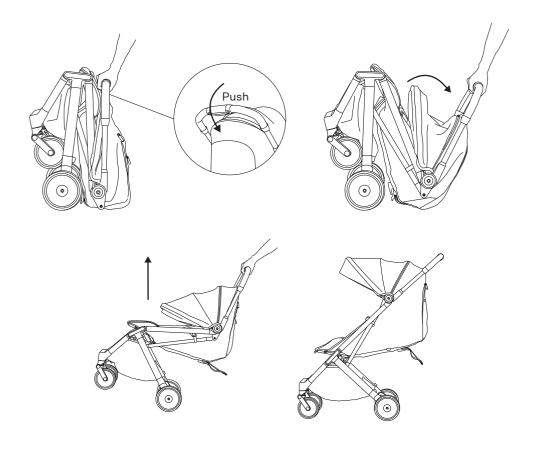

Assembly and disassembly of front wheels





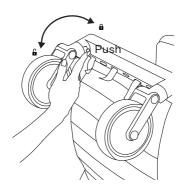


Brake







Adjusting stroller backrest

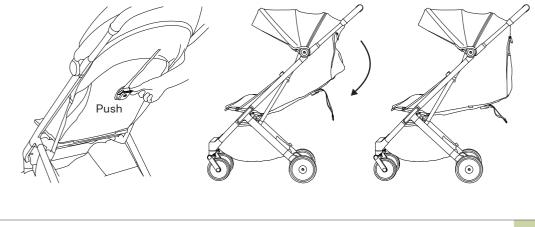

<page-header><page-header>













Stroller hood



Stroller hood

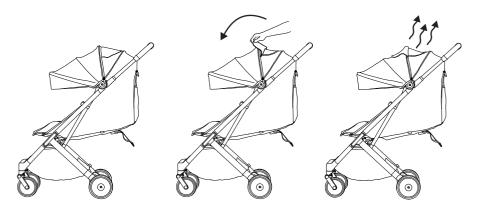



Safety buckle

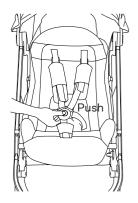

9


Safety buckle

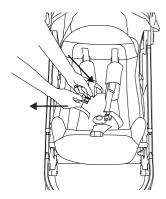

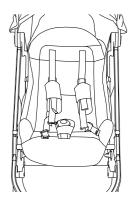


Safety belts length adjustment




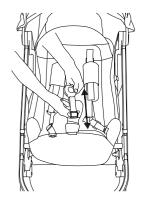


11


Safety belts length adjustment

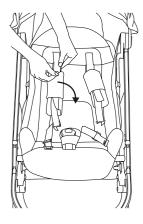

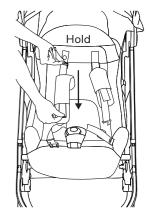

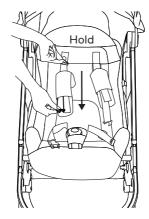

Safety belts height adjustment

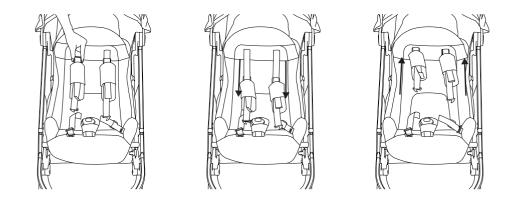

Basket






Basket








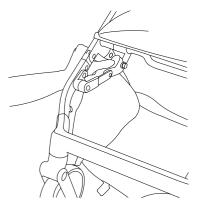

Carry handle

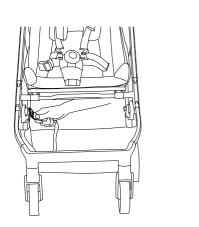




Seat inner removal






15


Seat inner removal

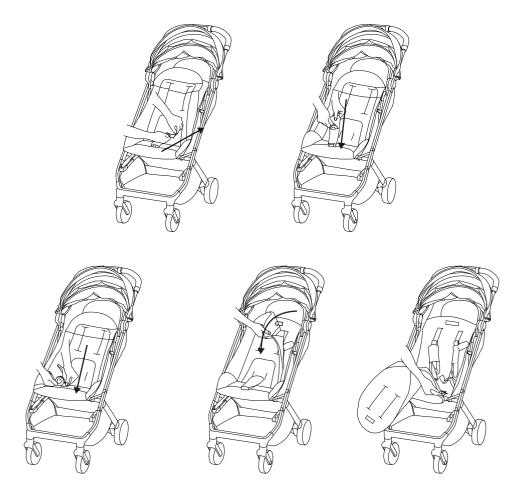


Soft goods removal

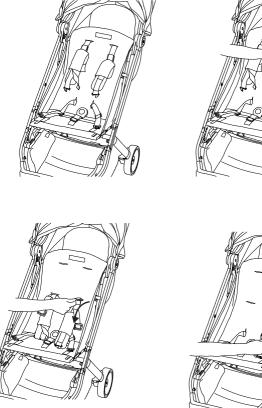




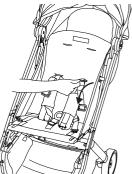





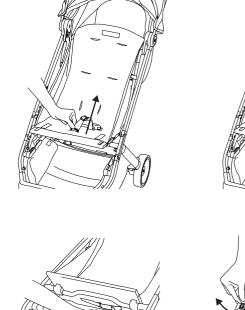

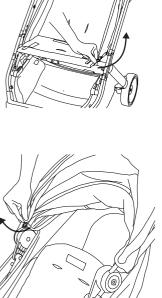

Soft goods removal

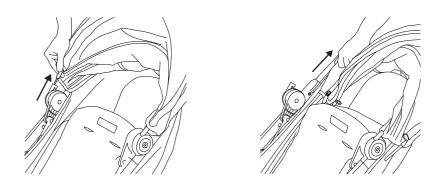

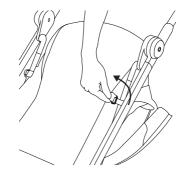

Check for the most recent manuals on our website

AVALEX PTE. LTD.

114 Lavender Street, #08-58/59 CT Hub 2, Singapore 338729 +65 6221 5096 office@anexbaby.com

Made in China

anexbaby.com